



More promotion and giveaway on the facebook,
Scan on "Gyroorboard" Messenger QR code to get it soon.

*The manufacturer reserves the right to make changes to the product, and update this manual at any time.
Visit www.gyroorboard.com to download the latest user manual.*

www.Gyroorboard.com

Email: support@Gyroorboard.com



@gyroorboard



@gyroorboard

 


@gyroorboard

www.gyroorboard.com

GYROOR®

6.5in **Electric-Assisted Scooter** **H40**

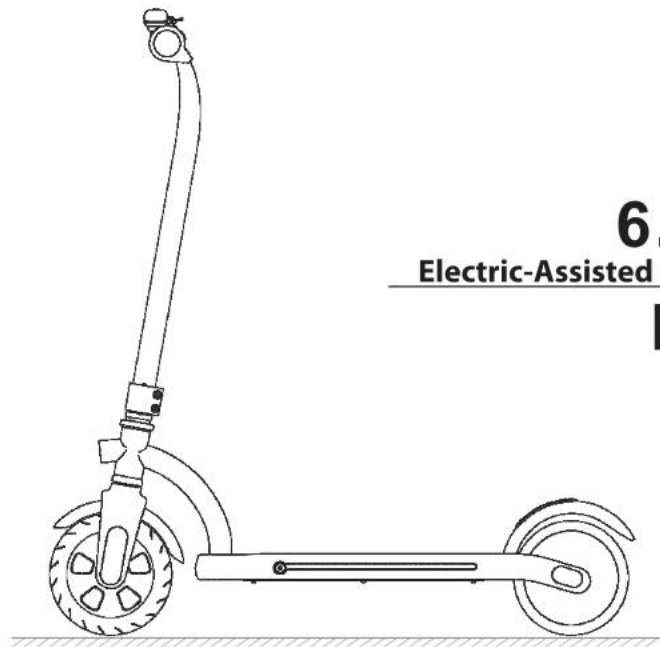


Caution: Please read the operating instructions before riding.
Beginner need to be accompanied by parents or adults to practice cycling
in open spaces. The operator can ride independently only after mastering
the kinetic energy and riding skills of the scooter.

Contents


	page
1.Product Accessories	01
2.Product Installation And Expansion Display	02
3.Introduction To Riding Operations	04
4.Safety Instructions	05
5.Battery And Charger	06
6.The Scope Of Warranty	07
7.Package Attachment	08
8.Parameters	08
9.Contact	09

 1. Product Accessories

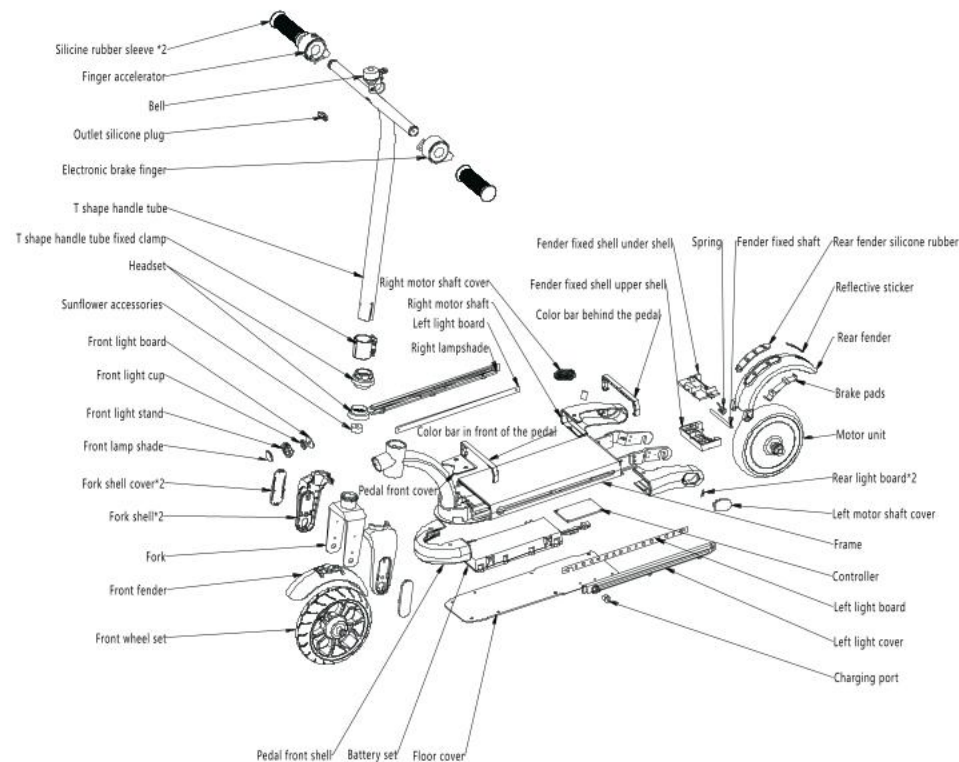


2. Product Installation And Expansion Display

 
01.Product Installation Diagram

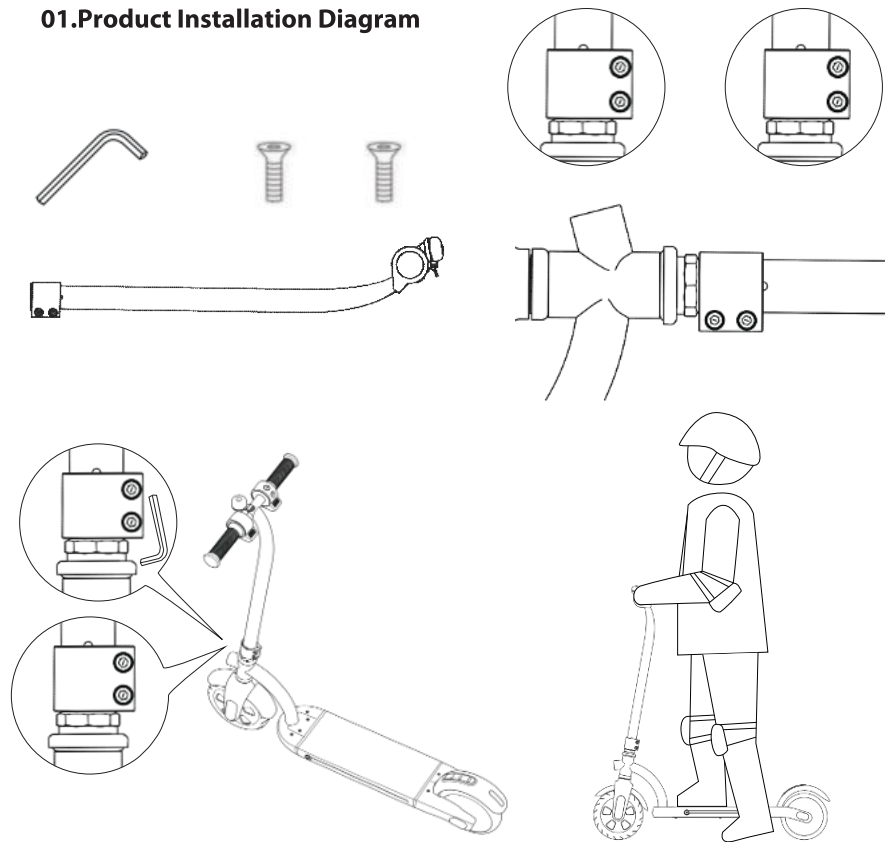

 02.Product expansion Diagram

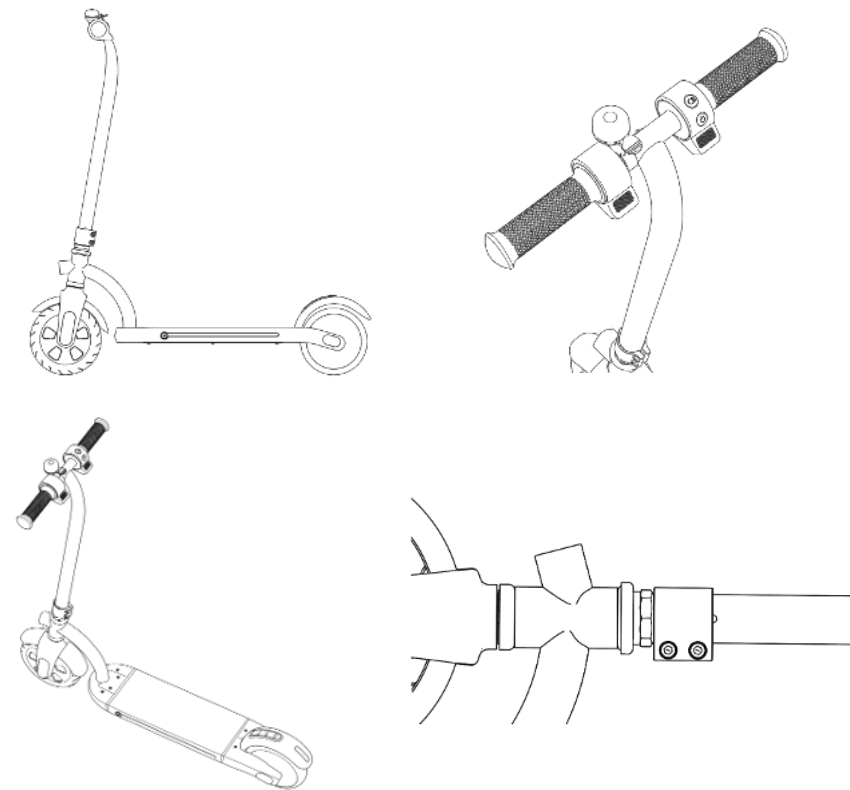

 3. Introduction To Riding Operations

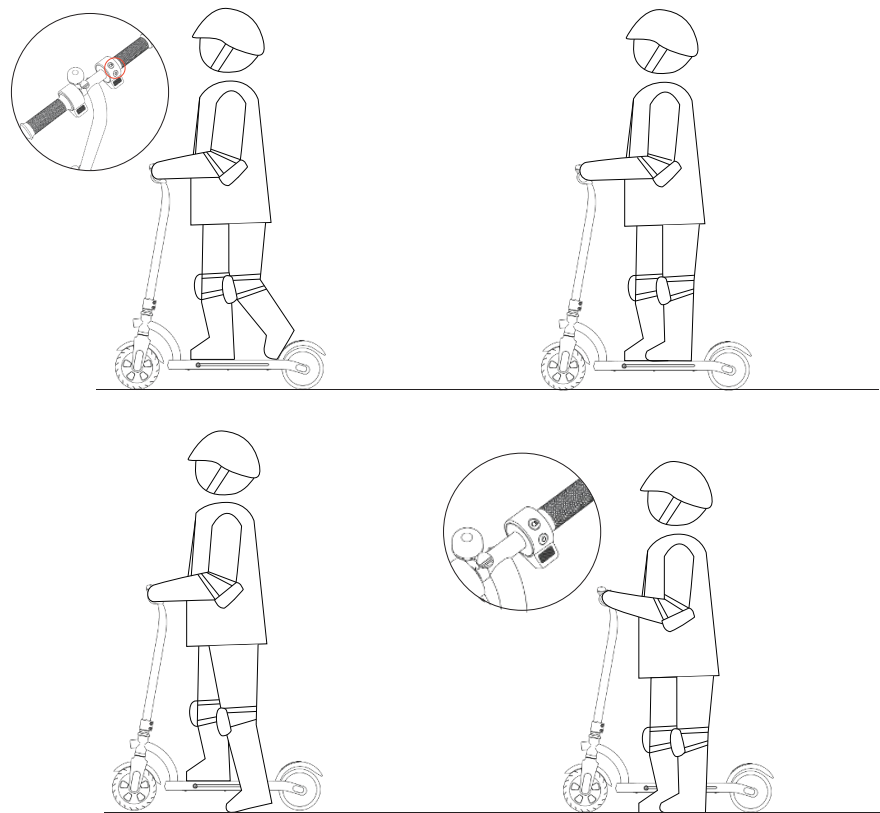

4. Safety Instructions

1. This product is an mini electric power-assisted scooter for children. It is restricted to one child. It should not be used by adults or two people at the same time. Children must be accompanied by parents or adults when using electric-assisted scooters.
2. When riding this product, please wear a safety helmet and other protective equipment.
3. Do not ride this product in places where it is unsafe or illegal such as motor vehicle lanes.
4. Please practice first in an open places and master the operation before driving.
5. Do not make dangerous moves or one-handed rides while the scooter is running. Keep your feet on the pedal.
6. Do not try to directly pass the step of 3 cm or more in the gap, which may cause the scooter to subvert, causing the rider to be injured or the car to be damaged; the steps below 3 cm should be avoided as much as possible.
7. When encountering rough or uneven road conditions, please slow down or get off.
8. Users must adjust the height of the product to the proper position to ensure safe driving.
9. Do not ride this product on slippery surfaces such as oil or ice on the surface.
10. Do not use this product below -5°C
11. Do not use it in a sloping section over 7 degrees. For use over 7 degrees uphill, you need pedal assist.
12. Do not immerse the product in water depths above 5 cm to avoid damage to the electrical parts of the vehicle due to water ingress.
13. In the bad weather such as rain, snow and wind, please avoid riding as much as possible to avoid unnecessary damage caused by unnecessary factors.
14. If the product is fully charged, it will not be used for at least one month, and it must be charged at least once a month. If it is riding to no electricity (the electricity is exhausted), it must be charged once every 7 days.

5. Battery And Charger

01.Lithium Battery

When you get the electric assist scooter for the first time, please fully charge the battery before use it.

1. Please charge immediately after the car emits a low battery warning tone to avoid damage to the battery and affect your use.
2. When the battery is not used for a long time, please charge it at least once a month (when the battery is fully charged).
3. If the battery is not used for a long time, the battery level is lower than the battery protection status and cannot be used. Please contact the dealer quickly.

Note: The battery is damaged due to water, collision and other abnormal factors, and is not covered by the warranty.

02.Charger

The dedicated charger provided by the company has a charging protection function, and when the battery is 100% fully charged, it will automatically stop charging. Damage caused by other abnormal factors such as water ingress, collision, etc., is not covered by the warranty.

1. Open the charging rubber cover on the pedal and insert the charger output connector into the charging hole.
2. Plug the charger input power into the power socket (AC100V-240V)
3. The charger indicator is red, indicating that it is charging; when the charger indicator turns green, the battery is fully charged.
4. When charging the battery, please place it in a dry and ventilated environment.

6. The Scope Of Warranty

Under normal use, if the parts of our electric assisted scooter are in the following order during the warranty period, please contact our company or product distributor, we will provide relevant after-sales service.

Name	Quality issues	Warranty period
Motor	The motor does not work under normal use	6 months
Charger	Charger failure under normal use	6 months
Lithium battery	Battery failure under normal use	6 months
Scooter body structure	Deformation, breakage, etc.cannot be used under normal use	No

(The above quality problem is free service, no maintenance fee)

Note: Please use our products in the correct way.

The damage and damage of the parts caused by abnormal use are not covered by free maintenance.

During the warranty period, if the following reasons cause the failure, the damage is not within the scope of quality assurance.

- 1.Not properly maintained and repaired in accordance with this manual.
- 2.Use the electric assist scooter for dangerous actions such as stunts etc, resulting in damage or malfunction.
- 3.Any disassembly or use of parts outside the original factory.
- 4.Body and body parts damaged by mistakes, traffic accidents or accidental collisions.
- 5.Incomplete label, water, part number mismatch.
- 6.Driving on an abnormal road to damage or malfunction.
- 7.Commercial rental or improper use.
- 8.The irresistible cause of the natural disaster.
- 9.Exposing this product to the sun for a long time or long-term rain, thus causing rapid aging and failure of the product.

7. Package Attachment

Attachment	Quantity
H30 Mini Electric-Assisted Scooter	1
Charger	1
Instruction manual	1
Spare tool	1
Srew	2

Note: Actual shipment product performance and parameters are subject to change without notice.

8. Parameters

Color	Grey /Blue/Red
Speed	6-12KM/H
Maximum grade	7-12°
Battery	21.6V, 2.0AH
Attachment	6.5 inch, 120W
Motor	6.5 inch, 120W
Max loading	55KG
Maximum running distance	5-12KM
Scooter size	84/36/90CM
Pedal distance from the ground	11.8CM
Scooter-body ground clearance	7.6CM
Net Weight/Gross Weight	6.7/8.2KG
Color	Grey /Blue/Red

9. Contact

Contact us if you experience issues relating to riding, maintenance and safety, or errors/faults with scooter .

Messenger: Gyroor (scan the QR code on back cover)

E-mail Service: support@gyroor. com



Have your order number on hand when contacting Gyroor.



More promotion and giveaway on the facebook,
Scan on "Gyroorboard" Messenger QR code to get it soon.